




# INSTALLATION / OWNER'S MANUAL

Single Handle Kitchen Faucet
Model # LKAV3031

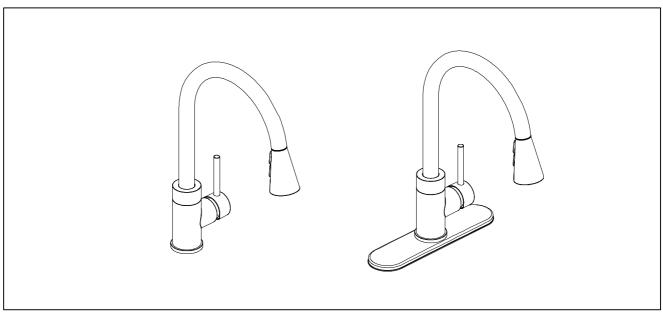

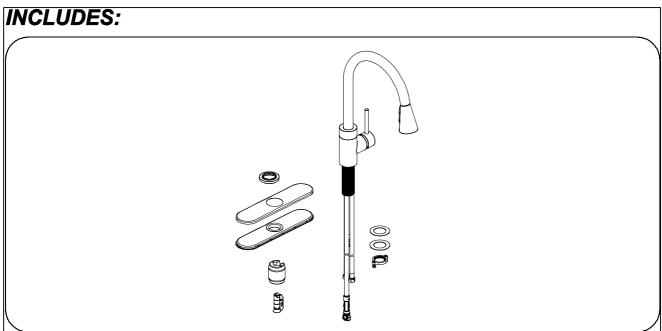


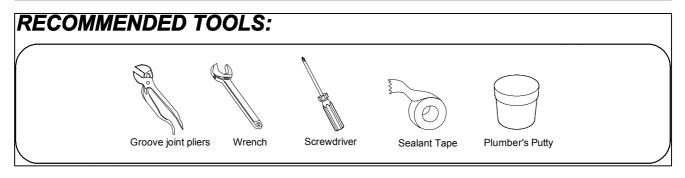


**SAVE FOR CONSUMER** 

#### WARNING: Please carefully read and properly follow the instructions for installation found in this manual.

## STEPS:

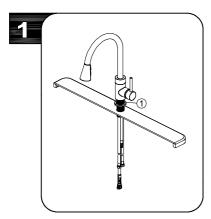


Optional Flange Installation: Before installation, ensure that the flange (1) is placed on the bottom of the new faucet assembly. Insert the faucet body through the hole in the sink.

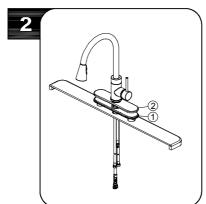


Optional Deck Plate Installation: Before installation, align the hole in the gasket (1) and deck plate (2) with the mounting hole in the sink. Place the faucet assembly through the deck plate (2) and mounting hole in the sink until the faucet assembly sets on top of deck plate (2).


plate (2). NOTE: If the sink is uneven, use silicone under the gasket (1).

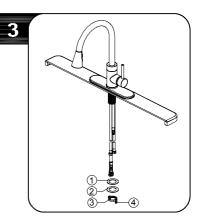

Secure the faucet assembly with the washers (1&2) and nut (3). Hand tighten the nut (3) onto the faucet assembly. Lock the nut (3) into position by tightening the screws (4) with a phillips screwdriver.

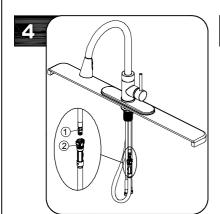


Align male fitting (1) and tabs (2) on quick connector. Push quick connector housing firmly upward and snap onto receiving male fitting. Pull down moderately to ensure connection has been made.

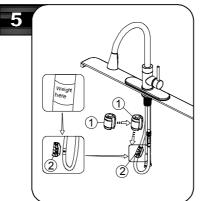

Install the weight clip (2) at the point of the hose marking "Weight here".

Insert the weight (1) onto the clip (2) by sliding it down onto the clip (2).

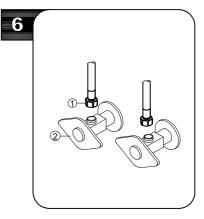



Make connections to water lines. Thread the nut (1) on the supply line onto the outlet of the water supply valve (2) and tighten with a wrench. Do not overtighten.



Important: after installation is completed, turn on hot and cold water supplies. Check for leaks. Pull the hose assembly out of the spout and remove the spray head by unscrewing it from the hose counterclockwise. Be sure to hold the end of the hose down into the sink and turn the faucet on to the warm position where it mixes hot and cold water. Flush water lines for one minute. Check for leaks. Re-tighten any connections if necessary, but do not overtighten. Reinstall spray head by hand tightening it back onto the spray hose.

## CARTRIDGE REPLACEMENT

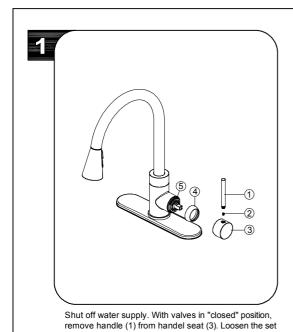

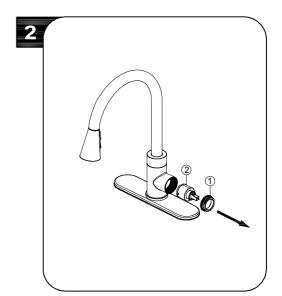

Loosen cartridge nut (1) by turning it counter-clockwise and lift out the cartridge (2). Insert new cartridge. Reinstall the handle.

## CARE AND CLEANING INSTRUCTIONS

Congratulations on your purchase of an Elkay product. Although your product is extremely durable, attention should be given to the care, cleaning and maintenance of this product. Cleaning agents and abrasives may cause damage, which may result in oxidation and discoloration.

screw (2) and unscrew the cap (4) from the cartridge

nut (5).

By following these simple guidelines for proper care and cleaning, it will give you years of enjoyment:

TO CLEAN: Simply wipe gently with a damp cloth and blot dry with a soft towel. A common rule of thumb is: when you dry off, dry off your product.

- Avoid build-up of soap, toothpaste or mineral deposits, as these tend to have an adverse effect on the appearance of the product.
- NEVER use cleaning products of any kind on this product especially those containing ammonia, bleach or alcohol - or those with any form of abrasive.

#### FOR CARE AND MAINTENANCE:

- The water in certain areas of the world can be very caustic standing water around the product can cause damage. Be sure to remove standing water with a dry, soft cloth as soon as possible.
- For polished brass finishes, as often as once a week, you can apply a paste wax or special, non-abrasive, brass coating (DO NOT APPLY POLISH).
- Before applying a protective coating, gently brush the entire fixture using a soft tooth brush. This will remove any dirt or deposit build-up.
- These simple steps will add temporary protective coating to your faucet and extend the life of the finish.

Failure to follow care and cleaning will void your warranty. For additional information, please visit elkayusa.com.

### WARRANTY

### **ELKAY LIMITED LIFETIME WARRANTY**

#### **ELKAY LIMITED LIFETIME WARRANTY**

Elkay warrants that all parts and finishes of the Elkay Residential brand faucets are free from defects in materials and workmanship for the life of the product, if purchased after 1996. This warranty covers the original consumer purchaser of the product only.

If the product should leak or drip during normal use, Elkay will provide, free of charge, a replacement cartridge. For other defects in material or workmanship, Elkay will, at its option, supply replacement parts (or if no longer available a comparable product). Elkay reserves the right to examine product in question and its installation prior to replacement.

#### What is not covered:

- Damage caused by accident, negligence, misuse, abuse, improper installation or operation or failure to follow care or installation instructions enclosed with your product.
- 2. Damage occurring during shipment of the product (claims must be presented to the carrier).
- 3. Normal wear and tear.
- 4. Labor charges, costs of removal and reinstallation, and any damages to other property.
- 5. All industrial, commercial and business use whose purchasers are hereby extended a limited lifetime on mechanical parts and 5 years on finish

#### What you must do to obtain warranty service:

Either write to Elkay Manufacturing Company, attention Consumer Care, 1333 Butterfield Road, Suite 20 Downers Grove, Illinois 60515 or call 1-800-223-5529. Please provide date of purchase and installation, description of nature of the defect, and model number or description of model and/or component part.

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS LIMITED WARRANTY MAY NOT BE ALTERED, VARIED, OR EXTENDED, EXCEPT BY A WRITTEN INSTRUMENT EXECUTED BY ELKAY. THE REMEDY OF REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS EXCLUSIVE. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON, WHETHER OR NOT OCCASIONED BY NEGLIGENCE OF ELKAY, INCLUDING WITHOUT LIMITATION DAMAGES FOR LOSS OF USE, COSTS PROPERTY DAMAGE OR OTHER MONETARY LOSS.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

This warranty covers product installed in the United States and Canada.

### REPLACEMENT PARTS P38124 (CR) Hand Spray P38149 Cartridge P38125 (LS) Hand Spray P38126 (MB) Hand Spray -P36163 Screw P38175 (BK) Hand Spray - P01315\* Handle & O-ring P38111 Set Screw P38135 (BK) Flange P38136 (CR) Flange RP70548 01314\* Handle Seat P38137 (LS) Flange Cartridge Nut P38138 (MB) Flange RP80132\* Cap P38139 (BK) Deck Plate P38140 (CR) Deck Plate P38141 (LS) Deck Plate -P70421 Block P38142 (MB) Deck Plate P37142 O-Ring P38148 Gasket P37147 O-ring RP70609 Clip P38169 Quick Connect RP70689 Weight P38165 Plastic Washer P35311 Metal Washer P38166 Nut P29260 Screw

**Elkay** 

©2019 Elkay Model # LKAV3031 (Rev. date: 11/2019)